

947 Chainsaw



Documents

Engine

Starter assy

Clutch and brake

Tank and air filter

Handle

Carburetor HDA-205

Carburetor HDA-314

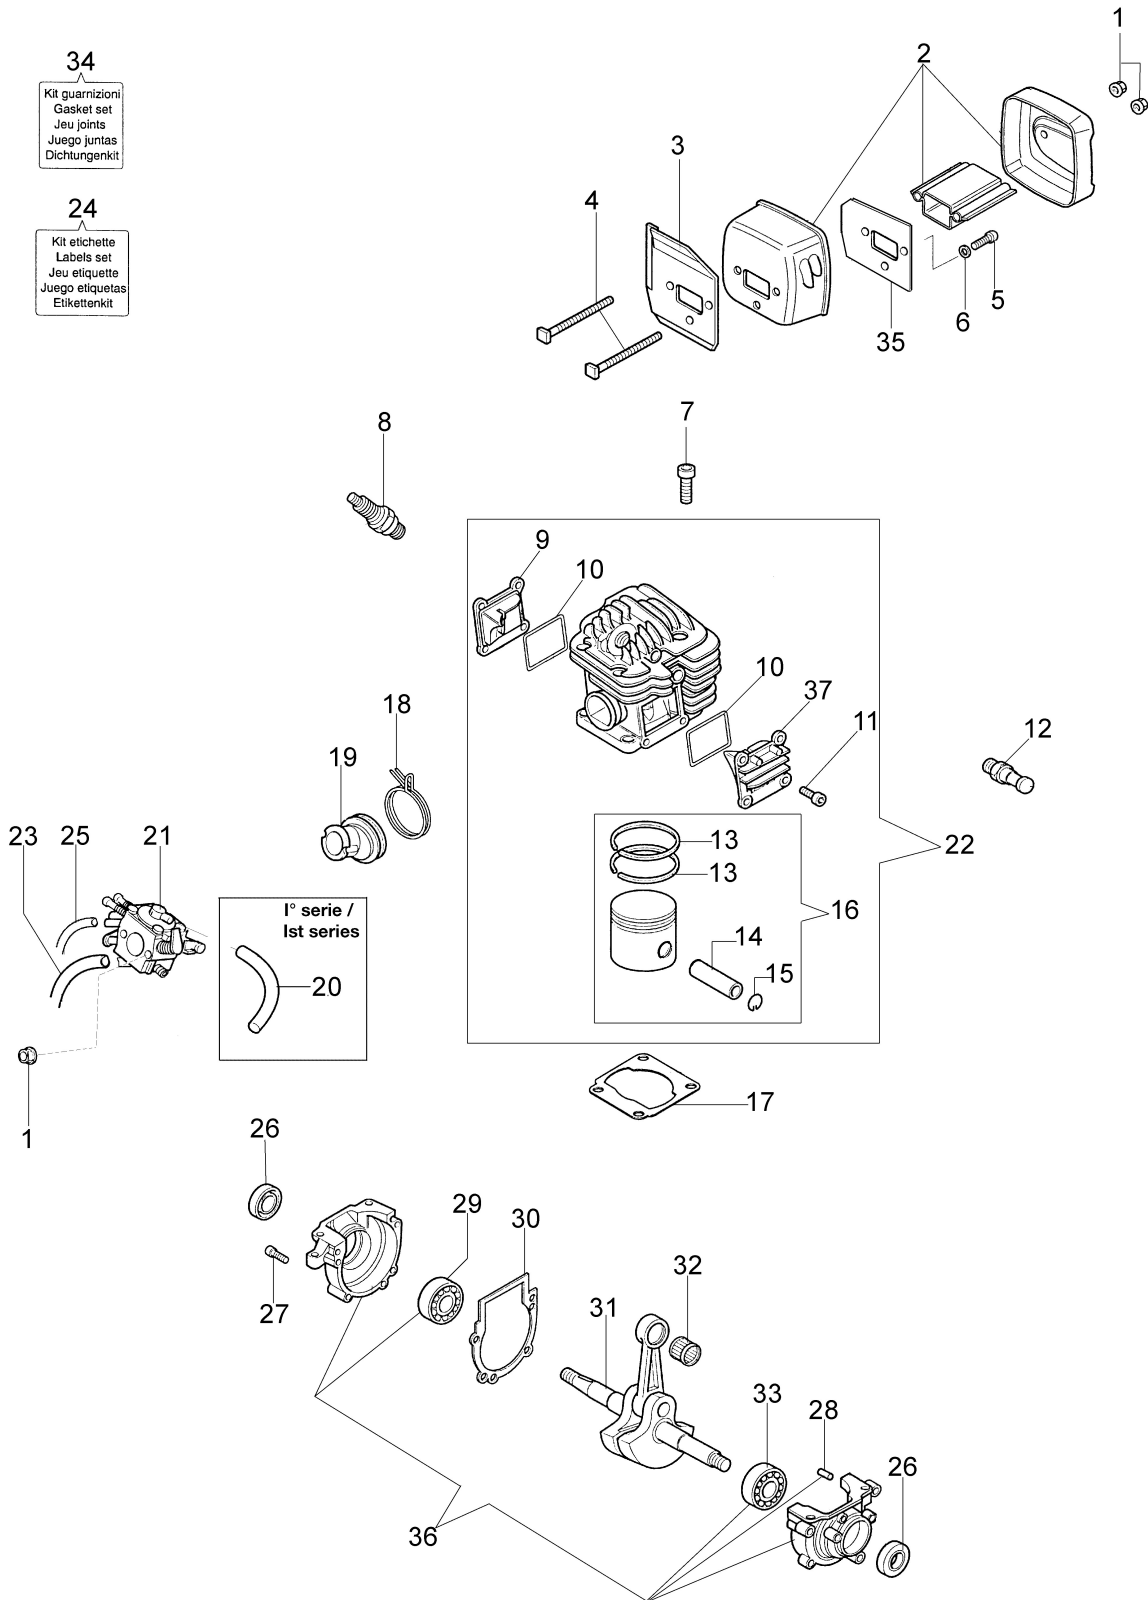


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	3914003R	Nut				
2	1	50072025A	Muffler				
3	1	50070031R	Gasket				
4	2	50070032R	Seal flange				
5	2	3960073R	Screw				
6	2	3918010R	Washer				
7	4	3860095R	Screw				
8	1	3055115R	Spark plug bpmr7a				
9	2	50070071	Cover				
10	2	50070186	Gasket				
11	8	3960074R	Screw				
12	1	50070207R	Decompressor				
13	2	50070128R	Piston ring Ø42				
14	1	50070117R	Piston pin				
15	1	004900061R	Ring				
16	1	50072032A	Piston assy				
17	1	50070047CR	Gasket				
18	1	097000059A	Spring				
19	1	50070010AR	Manifold				
20	1	50070152	Tube	SN 0463108262			BT4-155-05/13
21	1	50070224B	Carburetor kit HDA-205E				
22	1	50072024B	Cylinder				
23	1	50080133R	Tube				
24	1	50072026	Labels kit				
25	1	026400089A	Tube				
26	2	007201313R	Seal ring				
27	4	3860096R	Screw				
28	2	094600042	Plug				
29	1	005000016R	Bearing				
30	1	50070039CR	Gasket				
31	1	50070272AR	Crankshaft				
32	1	094000005R	Bearing				
33	1	3034012R	Bearing				
34	1	50072028A	Gasket set				
35	1	50070180R	Plate				
36	1	50080098R	Crankcase assy				
37	1	50070070	Cover				

Illustration Starter assy

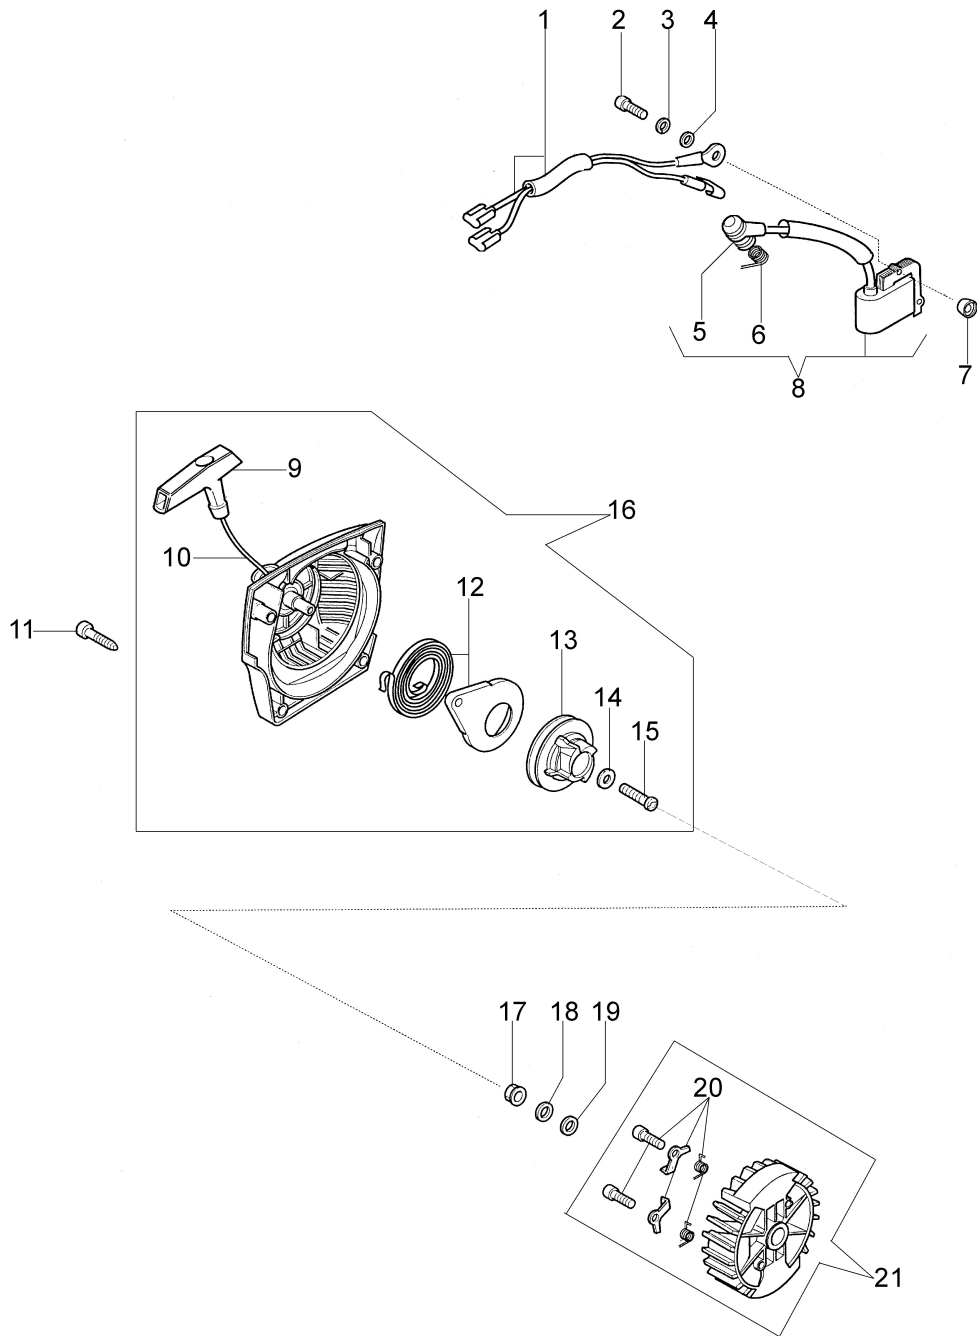


Illustration Starter assy

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50070077	Cable				
2	2	094000097	Screw				
3	2	006000315R	Washer				
4	2	3916004R	Washer				
5	1	094600097AR	Spark plug cap				
6	1	094600169AR	Spring				
7	2	50070148A	Spacer				
8	1	2501001R	Ignition coil				
9	1	097000064AR	Starter handle				
10	1	50070123R	Starter rope				
11	4	3960092AR	Screw				
12	1	50050073R	Spring				
13	1	50070050A	Starter pulley				
14	1	094500034R	Washer				
15	1	094600041AR	Screw				
16	1	50072005BR	Starter assy			SN 0465187683	
16	1	50072059BR	Starter assy	SN 0465187684			
17	2	004000142R	Nut				
18	2	3833080R	Washer				
19	2	3916009R	Washer				
20	1	50072029	Pawl				
21	1	50260015R	Flywheel				

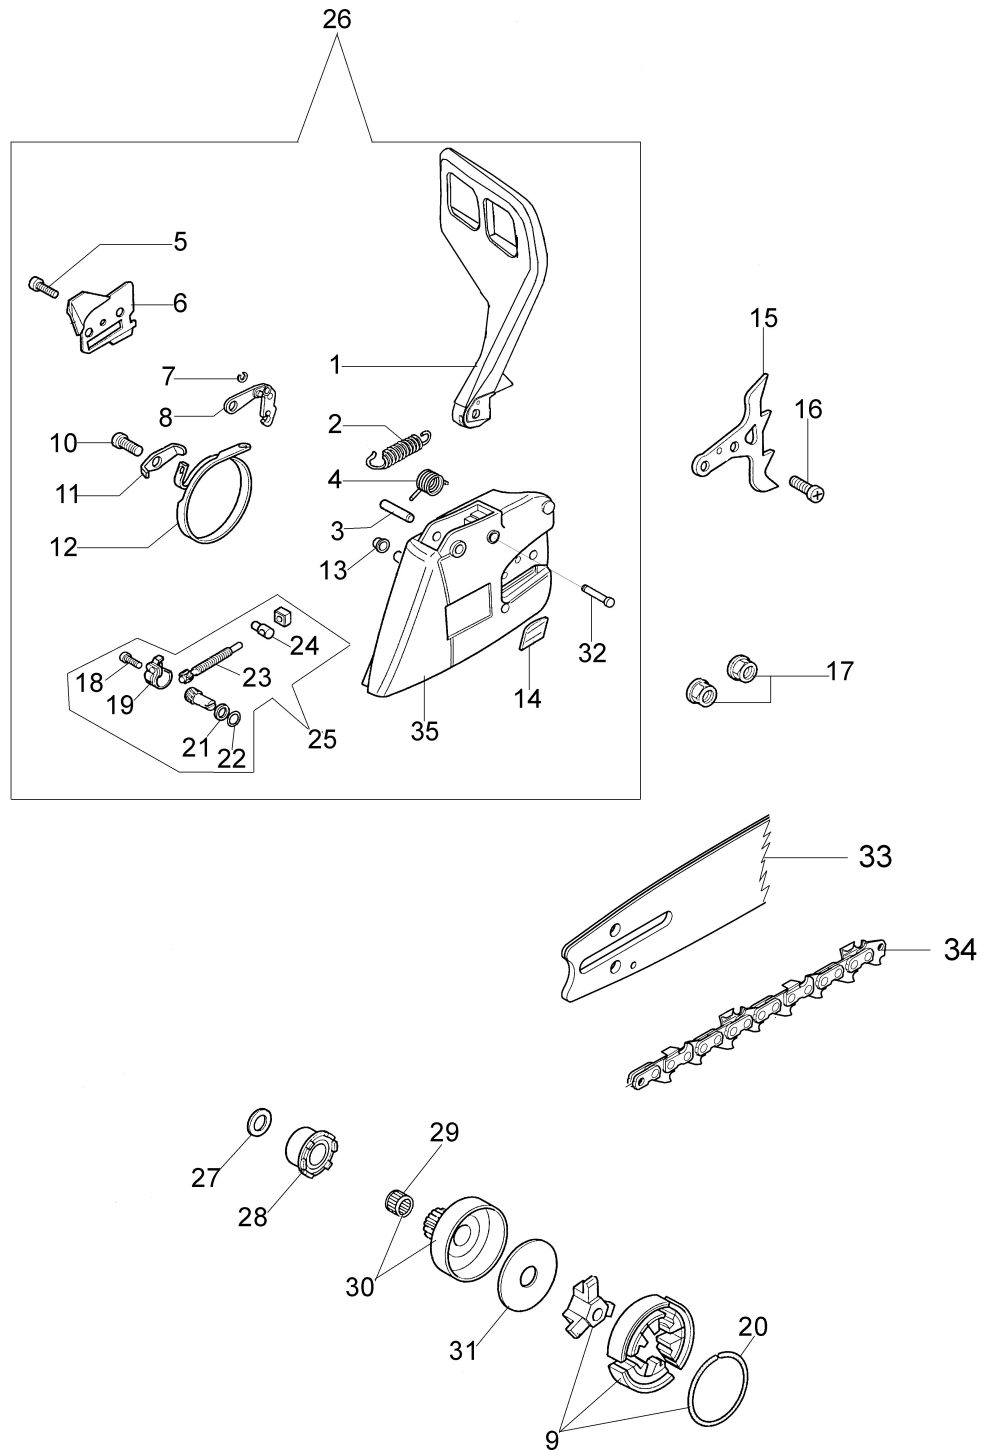


Illustration Clutch and brake

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50070095AR	Guard				
2	1	095000219AR	Spring				
3	1	097000107	Plug				
4	1	50010088AR	Spring				
5	1	3960045	Screw				
6	1	50070124AR	Plate				
7	1	3026003R	Ring				
8	1	097000146	Lever				
9	1	094500297R	Clutch				
10	1	3993070R	Screw				
11	1	50050125R	Plate				
12	1	50050039R	Brake band				
13	1	006000300	Bushing				
14	1	50070149	Guard				
15	1	50070033	Spike				
16	2	3960098R	Screw				
17	1	50010148R	Nut				
18	1	3960093	Screw				
19	1	50070081	Cover				
20	1	094500029AR	Spring				
21	1	50070088	Washer				
22	1	3049007	O-ring				
23	1	50070080	Chain tensioner screw				
24	1	50070087AR	Adjuster nut				
25	1	50072027A	Chain tensioner kit				
26	1	50072060CR	Chain cover assy				
27	1	50070069	Washer				
28	1	50070025R	Worm gear				
29	1	005000165R	Bearing				
30	1	094500761A	Chain sprocket .325				
31	1	375100012AR	Washer				
32	1	097000106R	Plug				
33	1	094600275R	Bar 16" - 41 cm				
33	1	094600285R	Bar 18" - 46 cm				
34	1	001000710R	Chain .325" x .058" (1,5mm)				
34	1	30629007A	Chain .325" x .058" (1,5mm) - 72 links				
35	1	50070084DR	Chain cover				

Illustration Tank and air filter

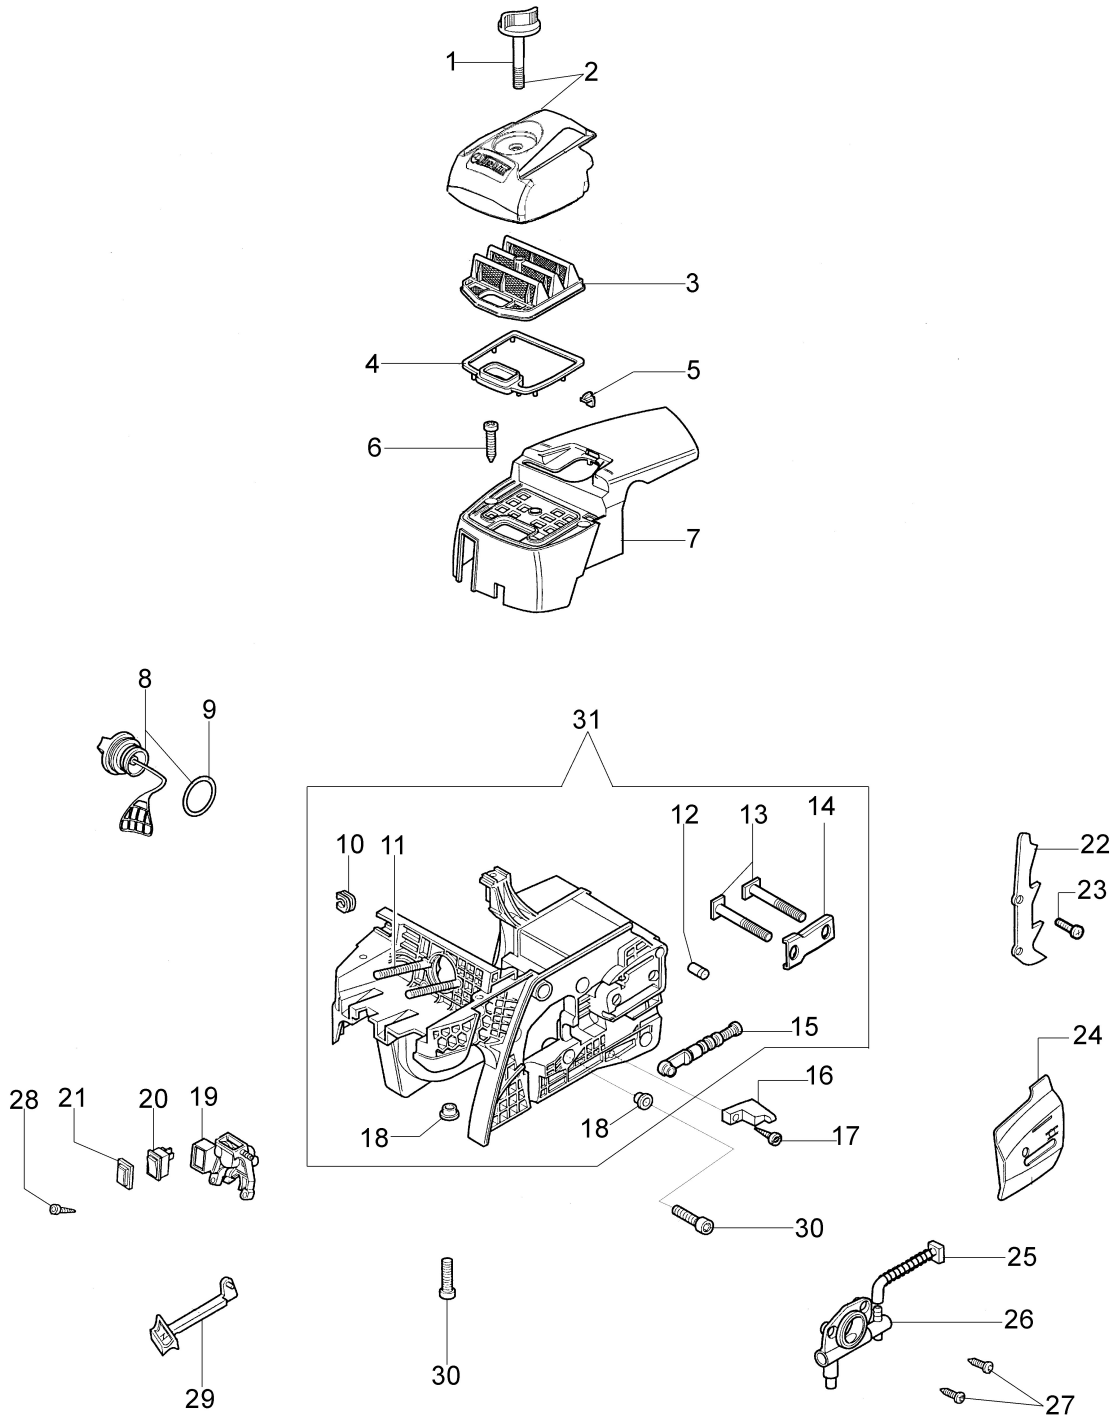


Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50070034R	Knob				
2	1	50072030B	Air filter cover		SN 0465187683		
2	1	50072058B	Air filter cover	SN 0465187684			
3	1	50070036R	Air filter standard				BT1-019-07/07
3	1	50070244R	Air filter optional				BT1-019-07/07
4	1	50070056	Gasket				
5	1	50070066	Deflector				
6	3	3960092AR	Screw				
7	1	50070192	Cover		SN 0465187683		
7	1	50070281DR	Cover	SN 0465187684			
8	1	50052005R	Tank cap				
9	1	3049025	O-ring				
10	1	005000347AR	Grommet				
11	1	50070067A	Tie rod				
12	1	097000229R	Breather valve				
13	1	50070052AR	Screw				
14	1	50070211	Plate				
15	1	50072010BR	Oil filter				
16	1	094600369R	Guard				
17	1	094600041AR	Screw				
18	5	50050067R	Spacer				
19	1	50080068R	Air filter support	SN 0463108262			BT4-155-05/13
20	1	2317021R	Switch				
21	1	2317013	Guard				
22	1	50070062	Spike				
23	2	3960098R	Screw				
24	1	50070055R	Plate				
25	1	50070054R	Tube				
26	1	50170051BR	Oil pump				BT4-126-10/07
27	2	3960074R	Screw				
28	1	3960091AR	Screw				
29	1	50070228R	Lever				
30	5	3860099R	Screw				
31	1	50070007GR	Crankcase				


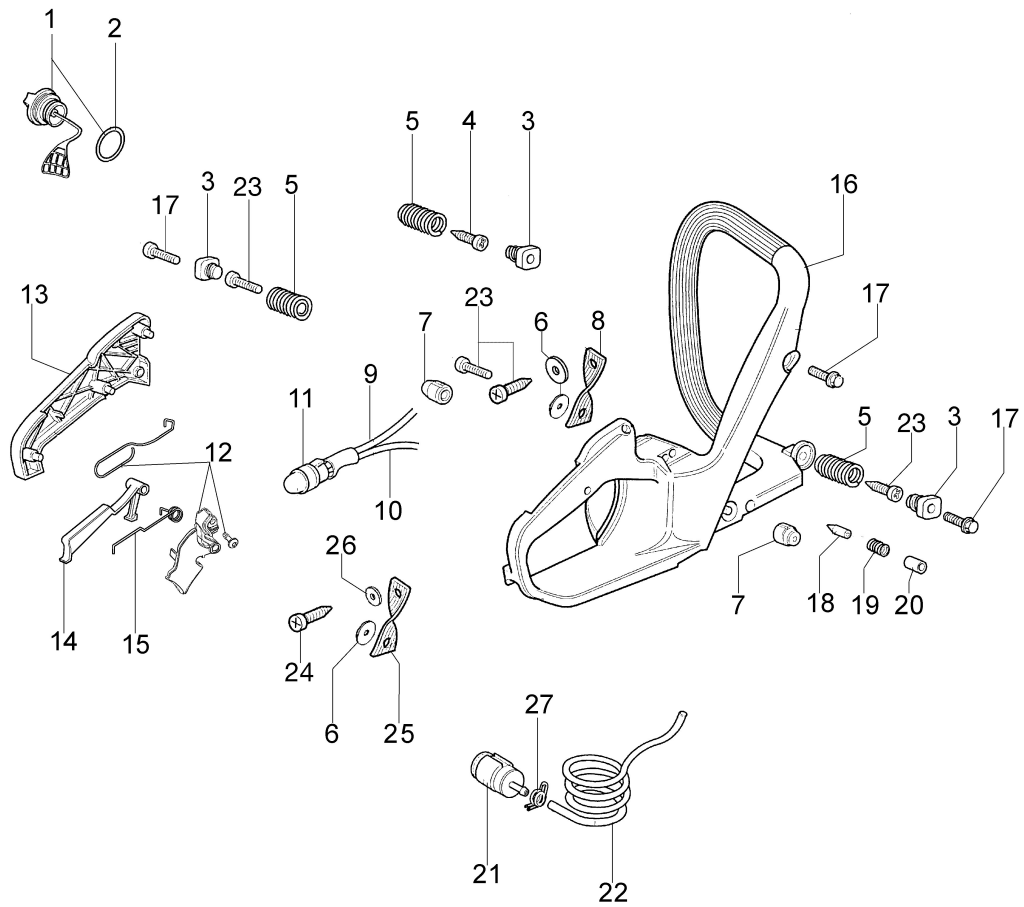


Illustration Handle

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50072009R	Cap				
2	1	099900090R	Ring				
3	3	50070049R	Support				
4	1	3960073R	Screw				
5	3	50070024R	Spring				
6	3	3057005R	Washer				
7	2	50010061R	AV-mount				
8	1	50070182	Strap				
9	1	50060039	Tube				
10	1	50080134R	Tube				
11	1	2318817R	Air purge				
12	1	50070259	Throttle kit				BT4-142-05/10
13	1	50050214AR	Cover				
14	1	50050046AR	Lever				
15	1	097000028R	Spring				
16	1	50070065BR	Tank assy				
17	3	3960099R	Screw				
18	1	094500577AR	Breather valve				
19	1	094500575R	Spring				
20	1	50050071R	Breather valve				
21	1	50010218R	Fuel filter				
22	1	50070064	Fuel line				
23	4	094600041AR	Screw				
24	1	3960091AR	Screw				
25	1	50070181	Strap				
26	1	3916005R	Washer				
27	1	4098377R	Band				

FINO A NOVEMBRE 2004
 TILL NOVEMBER 2004
 BIS NOVEMBER 2004
 HASTA NOVIEMBRE 2004
 JUSQU'A NOVEMBRE 2004

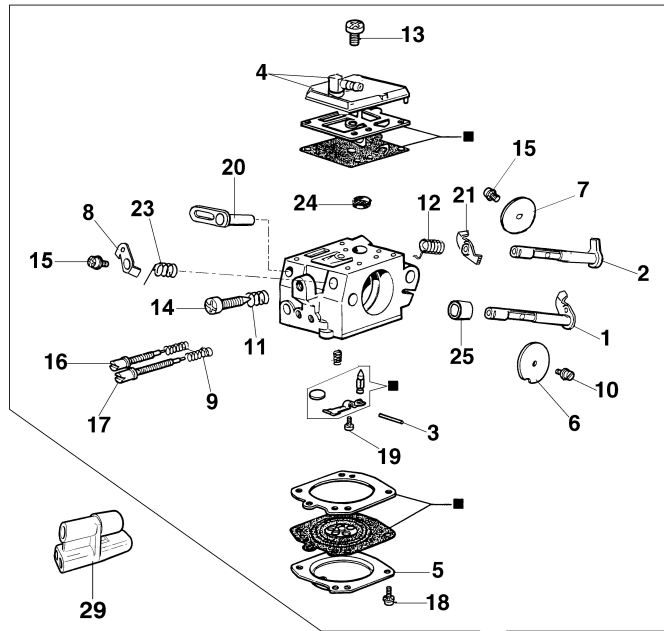


■ 28 KIT RIPARAZIONE
 REPAIR KIT

compl. 22

DA NOVEMBRE 2004
 FROM NOVEMBER 2004
 AB NOVEMBER 2004
 DESDE NOVIEMBRE 2004
 DEPUIS NOVEMBRE 2004


■ 89 KIT RIPARAZIONE
 REPAIR KIT

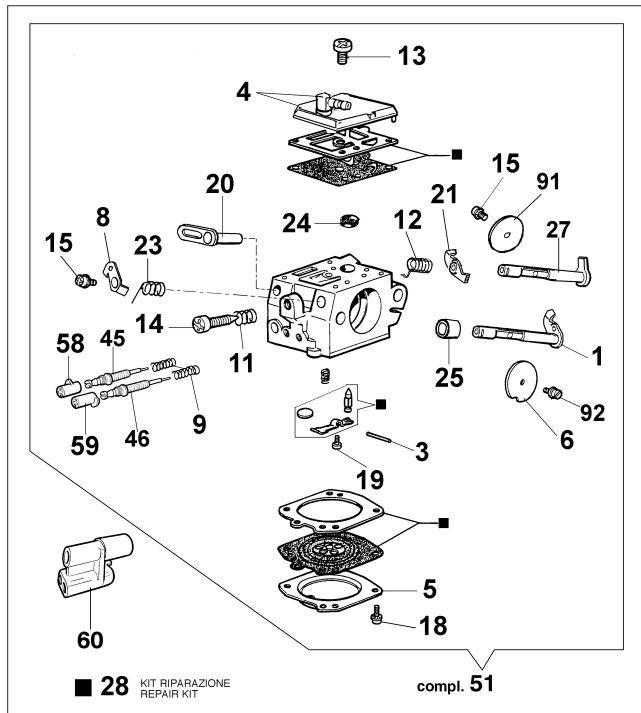

■ 28 KIT RIPARAZIONE
 REPAIR KIT

compl. 51

kit 93

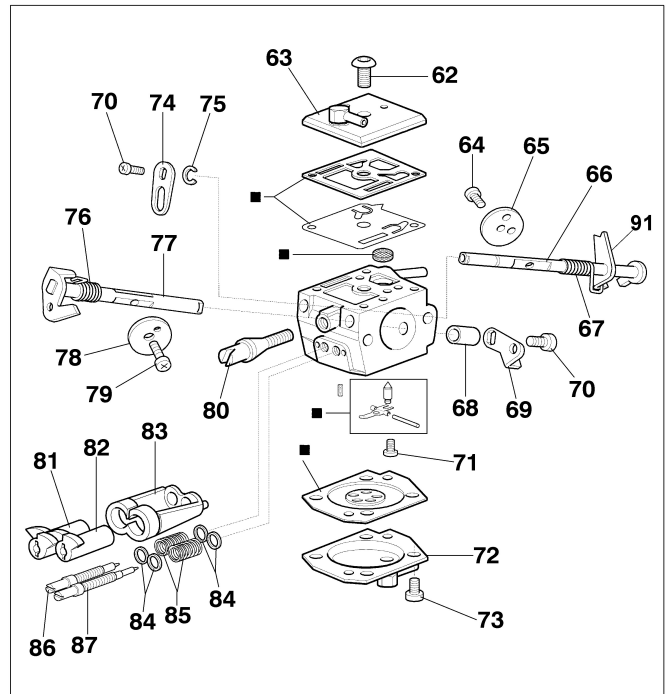

compl. 90

Illustration Carburetor HDA-205

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50070155	Shaft				
2	1	50070232	Shaft				
3	1	003300201	Spindle				
4	1	50070154	Cover				
5	1	50070153	Cover				
6	1	50070156	Shutter				
7	1	2318809	Shutter				
8	1	50070160	Throttle lever				
9	2	095000147	Spring				
10	1	380000338	Screw				
11	1	094600148	Spring				
12	1	50070166	Spring				
13	1	50010109	Screw				
14	1	50070163	Screw				
15	2	50010141	Screw				
16	1	50070173	Screw H				
17	1	50070172	Screw L				
18	4	035000162	Screw				
19	1	003300202	Screw				
20	1	50070158	Starter lever				
21	1	50070171	Lever				
22	1	-	Not available for this product				
23	1	50070165	Spring				
24	1	003300204	Fuel filter				
25	1	50070169	Bushing				
27	1	50070232	Shaft				
28	1	2318673	Repair kit				
29	1	50070188	Screw guide				
45	1	50070234	Screw H				
46	1	50070233	Screw L				
51	1	-	Not available for this product				
58	1	2318695	Cap				
59	1	2318694	Cap				
60	1	50070086	Screw guide		SN 0465248122		
62	1	093500574	Screw				
63	1	2318919	Cover				
64	1	2318388	Screw				
65	1	2318913	Shutter				
66	1	2318914	Shaft				
67	1	2318924	Spring				
68	1	093500560	Clamp				

Illustration Carburetor HDA-205

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
69	1	2318918	Lever				
70	1	004900196	Screw				
71	1	2318928	Screw				
72	1	2318934	Cover				
73	4	2318522	Screw				
74	1	2318909	Lever				
75	1	2318535	Ring				
76	1	2318932	Spring				
77	1	2318936	Shaft				
78	1	2318917	Shutter				
79	1	2318916	Screw				
80	1	2318908	Screw				
81	1	2318903	Cap				
82	1	2318889	Cap				
83	1	2318904	Guard				
84	4	2318888	Washer				
85	2	2318532	Spring				
86	1	2318912	Screw L				
87	1	2318911	Screw H				
89	1	2318868	Repair kit				
90	1	50070224B	Carburetor kit HDA-205E				
91	1	2318809	Shutter				
92	1	2318883	Screw				
93	1	50070224B	Carburetor kit HDA-205E				

Illustration Carburetor HDA-314

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	2318106	Cap				
2	1	2318109	Adjust. screw MAX				
3	1	2318984	Adjust. screw MIN				
4	2	2318107	Spring				
5	1	2318673	Repair kit				
6	1	2318981R	Carburetor HDA-314	SN 0465248123			
7	1	50080082R	Screw guide	SN 0465248123			
8	1	50070224B	Carburetor kit HDA-205E				